

# VENTIS® How to Dock the Ventis®

1

- Lift up the spring loaded clip located at the top of cradle
- With the monitor clip/back toward you, insert the monitor face all the way into the cradle bottom first

2

- Slide the sensor area of the monitor against the cradle and release the latch

3

- The docking station will perform the bump/calibration test as normal



**INDUSTRIAL  
SCIENTIFIC**

[www.indsci.com](http://www.indsci.com)

#### AMERICAS

Phone: +1-412-788-4353

1-800-DETECTS (338-3287) | [info@indsci.com](mailto:info@indsci.com)

#### ASIA PACIFIC

Phone: +65-6561-7377

Fax: +65-6561-7787 | [info@ap.indsci.com](mailto:info@ap.indsci.com)

#### EMEA

Phone: +33 (0)1 57 32 92 61

Fax: +33 (0)1 57 32 92 67 | [info@eu.indsci.com](mailto:info@eu.indsci.com)